



LCS
AIR ARMS

SK-19

FULL AUTO AIR GUN

ATTENTION

SK-19 air rifle is designed specifically for use with dry compressed air. **NO OTHER GAS OR GAS COMBINATION CAN BE USED!** Never fire the rifle when it is empty of air or when air cylinder is removed, otherwise valve may be damaged.



1.Barrel with Shroud

2.Air Tank

3.Scope Rail

4.Regulator Adjustor

5.Quick Fill

6.Air Pressure Gauge

7.Trigger

8.Magazine

9.Velocity Adjustor

10.Regulator Gauge

11.Safety

12.Recoil Pad



How to Fill with Air

1. Wear safety glasses when filling with high pressure air.
2. Make sure the airgun is unloaded and not cocked before filling.
3. Read all instructions with your hand pump/air compressor, so you are familiar with its operation. Use only a pump designed for filling a pre-charged airgun. DO NOT use a standard air compressor or bicycle pump.
4. Make sure airgun is "ON SAFE" and pointed in a SAFE DIRECTION.
5. Connect the quick-disconnect fitting on the hand pump hose to the quick fill port.
6. Make certain the bleed valve on your fill device is fully closed.
7. Start pumping and continue until the gauge needles on your pump and on the airgun are between 2000 psi and 3000 psi depending on your desired tune.
8. DO NOT fill the airgun to more than 250bar/3625 psi.
9. Open the bleed screw on the pump base rapidly in a counter-clockwise direction to COMPLETELY bleed the hose. You must bleed the fill hose COMPLETELY to avoid hose whip from pressure in the fill hose.
10. Disconnect the pump from the quick fill port on the airgun.

NOTE: when filling the airgun for the first time, you must cock the rifle before filling it if the gun was shipped unpressurized.

NOTE: ONLY clean and dry compressed air is allowed.

NOTE: DO NOT DRY FIRE.

CAUTION: NEVER FILL YOUR AIRGUN OVER 250 BAR/3,625 PSI. THIS IS DANGEROUS AND WILL VOID THE WARRANTY. In an over-filled condition (above 300 bar/4,350 psi), the regulator may malfunction and cause the rifle to fire at a much lower velocity.



Removing/Installing the Air Bottle

To remove the air bottle, rotate the air bottle COUNTER-CLOCKWISE. A very small amount of air will be released.


To install the air bottle, rotate the bottle assembly onto the airgun bottle stem CLOCKWISE until tight. Be cautious NEVER force the threads during removing or installing the bottle.



5 Loading Magazine

Total 19 airgun pellets can be filled into the magazine. See the red pointer in figures below. Uplift the Magazine Key on the right hand side.


Rotating the magazine CLOCKWISE and dropping pellets on right hand side until each hole is filled. Secure the Magazine Key by flipping down.

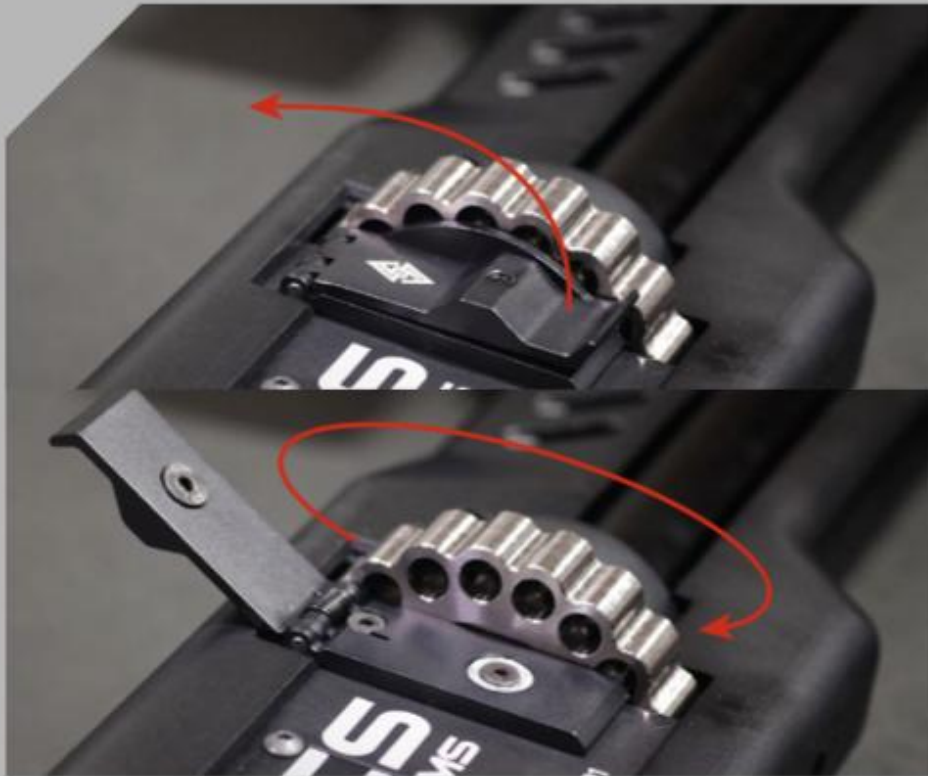

6 Operating the Safety

Switch-style safety can adjust the airgun into different modes.

Attention: Always point the airgun in a safe direction .

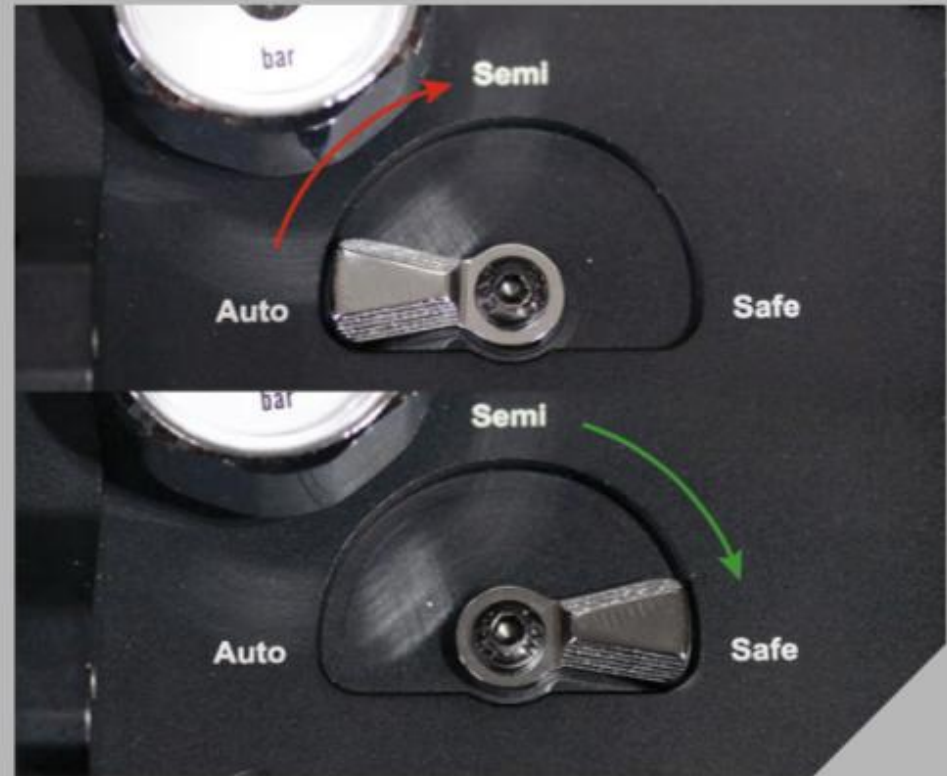

REMINDER - DO NOT fire the airgun without air. It may damage the valve assembly and void your warranty.



Adjusting the Regulator

The valve control knob is located between the barrel and the air bottle.



Adjust the Power

The power will increase when the knob turned counter-clockwise and will decrease when the knob turned clockwise.




NOTE: NEVER adjust the regulator below 100 BAR as damage to the system may occur and will void your warranty!

NOTE: NEVER adjust the regulator above 150 BAR as damage to the system may occur and will void your warranty!



Installing the Barrel

Rotate **CLOCKWISE** to lock and install

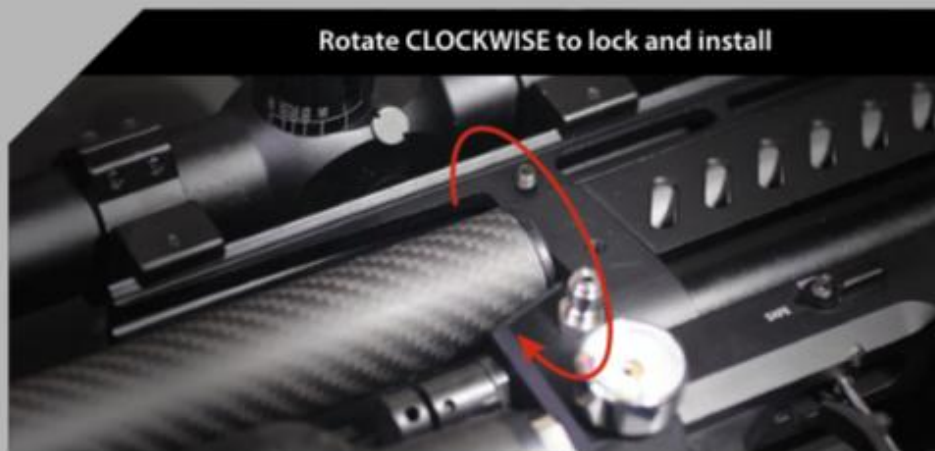

To remove, rotate **COUNTER - CLOCKWISE** to unlock the barrel



WARRANTY INFORMATION

1. All SK-19 carry a Three Year Warranty against faulty workmanship and defective materials.
2. Proof of purchase is required. Warranted to retail customer for (3) years from date of purchase.
3. The warranty guarantee does not cover any damage caused by tampering with the rifle or abuse. This rifle should only be disassembled by factory-authorized repairmen.
4. Should a rifle be returned or collected under warranty, SK-19 or its approved agent reserve the right to charge for postage.
5. Call LCS AIR ARMS at 336-662-5657
6. You can also email us at info@lcsairarms.com
7. Please provide your Name, address, email address, phone number and explaining the defect that you found. A copy of the original dated receipt must be accompanied.



WARNINGS

- Never point your air rifle at anyone or anything that are not permitted to shoot
- Never leave your air rifle unattended
- Never fire when cylinder is removed or there is empty of air
- Ensure your rifle is not loaded when you first pick it up
- Eye protection is recommened when charging the cylinder
- Always pay attenetion when operating the rifle
- Know and obey the laws in your country